

## ONE YEAR LIMITED WARRANTY

**Royal Sovereign International, Inc.** warrants this product to be free from defects in material and workmanship for a period of one (1) year. This warranty is extended to the original purchaser only.

This warranty only covers products that are properly installed, properly maintained, and properly operated in accordance with the instructions provided. This limited warranty does not cover any failures or operating difficulties due to normal wear and tear, accident, abuse, misuse, alteration, misapplication, improper installation, or improper maintenance and service by you or any third party.

No returned product will be accepted without a Return Authorization number. To request a Return Authorization, please visit us at [www.royalsovereign.com](http://www.royalsovereign.com). All transportation costs for the return of damaged product or parts will be the responsibility of the purchaser. Return defective product, in original packaging, to the address below.

**Royal Sovereign International, Inc.** requires reasonable proof of your date of purchase from an authorized retailer or distributor. Therefore, you should keep your receipt, invoice, or canceled check from the original purchase. The limited warranty shall be limited to the repair or replacement of parts which prove defective under normal use and service within the warranty period.

**Royal Sovereign International, Inc.** (and its affiliated companies) SHALL HAVE NO LIABILITY WHATSOEVER TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above exclusion and limitations may not apply to you.

### ROYAL SOVEREIGN INTERNATIONAL, INC.

2 Volvo Dr., Rockleigh, NJ 07647 USA

TEL: +1) 800-397-1025

Email: [info@royalsovereign.com](mailto:info@royalsovereign.com)

## TWO ROW COIN COUNTER WITH VALUE COUNTING



FS-2N

Thank you for purchasing the Royal Sovereign Two Row Coin Counter - FS-2N. This manual will provide you with safety information, instructions for optimal use, and proper care and maintenance for your product. Please read this manual carefully before operating.

## CONTENTS

|   |     |
|---|-----|
| SAFETY INSTRUCTIONS .....                   | 2   |
| BOX CONTENTS & PRODUCT VIEW .....           | 3   |
| QUICK START GUIDE .....                     | 4   |
| FRONT PANEL .....                           | 5   |
| PRODUCT OPERATION.....                      | 6-7 |
| COIN WRAPPING .....                         | 8   |
| TROUBLESHOOTING .....                       | 9   |
| PRODUCT REGISTRATION & SPECIFICATIONS ..... | 10  |
| WARRANTY .....                              | 11  |

## PRODUCT REGISTRATION


Please register your product within 30 days of purchase.

To register your product, please visit the support tab at [www.royalsovereign.com](http://www.royalsovereign.com). Registration creates a record of your purchase and entitles you to a wide range of benefits, such as notifications of product updates, newsletters, and special offers. Registration is quick and easy!

## SPECIFICATIONS

| MODEL             | FS-2N  |
|-------------------|--|
| Speed             | Up to 312 coins/min                            |
| Motor Type        | AC synchronous                                 |
| Power Consumption | 9.6 W  |
| Power Supply      | 120V / 50-60 Hz                                |
| Unit Weight       | 5.50 (lbs) / 2.50 (kg)                         |
| Unit Dimensions   | 7.10 x 8.40 x 9.00 (in) / 180 x 213 x 229 (mm) |

## TROUBLESHOOTING

| Symptom  | Check  |
|--|--|
| 1. Motor does not run.   | <ol style="list-style-type: none"> <li>1. Check that the power cord is plugged in.</li> <li>2. Check that the power switch is turned on.</li> <li>3. Push the 'RUN/STOP' button again.</li> <li>4. Check that the tube trays are positioned properly.</li> </ol>   |
| 2. There is a ticking sound.   | The ticking sound is normal. This is the anti-jam device.  |
| 3. Coins are not sorting into tubes.<br><br><br><br>To retrieve problem items, unscrew Hopper Lid and remove Inner Vessel. | Foreign objects or bent, damaged, or sticky coins may cause the machine to jam: <ol style="list-style-type: none"> <li>1. Tap machine gently on the side to loosen jam.</li> <li>2. This unit is designed to resolve jams automatically, so wait about 15 seconds as the Agitation Screw and Running Vessel rotate forwards and backwards.</li> <li>3. If the machine is still not sorting, push the "RUN/STOP" button to stop sorting.</li> <li>4. <b>UNPLUG THE MACHINE:</b> Loosen the hopper lid screw with a coin (SEE IMAGE TO THE LEFT).</li> <li>5. Lift the hopper lid and remove the Inner Vessel, exposing the Running Vessel.</li> <li>6. Retrieve problem item and replace Inner Vessel.</li> <li>7. Screw the hopper lid back on and push the "RUN/STOP" button to start sorting again.</li> </ol> |

## SAFETY INSTRUCTIONS

When using this machine follow these basic safety precautions to reduce risk of fire, electric shock, or injury.

### WARNING

1. Plug the power cord into a properly grounded wall outlet. Do not alter the electric plug in any way.
2. Do not use the machine if the power cord is damaged. This may result in electric shock, fire, or other hazards.
3. Do not place the machine in an area where it may be exposed to water or other liquids.
4. To reduce the risk of electrical shock, do not take apart the machine. When service or repair is needed bring to a qualified service repair technician.
5. When unplugging the power plug, grip the plug to pull it out. Pulling the cord may result in electric shock, fire, or damage to the machine.
6. Do not place objects on the power cord and do not bend it excessively. This may result in electric shock, fire, or other hazards.

### CAUTION

1. Before cleaning the machine, unplug the machine from the wall. Do not use liquid or aerosol cleaners on the machine.
2. Do not use the machine in areas with high temperature or high humidity. This may result in the machine not working properly. This machine works best at room temperature.
3. When not using the machine for long periods of time, unplug the machine from the outlet and close the front cover.

Read & Fully Understand This Owner's Manual Before Using This Machine.

## BOX CONTENTS



Coin Counter



Coin Wrapper Starter Pack

## PRODUCT VIEW



## COIN WRAPPERS

Royal Sovereign coin sorters can be used with or without coin wrappers. We recommend using coin wrappers to help with your coin organization. Royal Sovereign preformed coin wrappers easily slide into coin tubes for easy and hassle free coin wrapping. Once full, simply slide the full coin wrappers out of the tubes and crimp the top of the wrapper (SEE BELOW). Coin wrappers are the perfect solution for wrapping up your change and taking it to the bank.



## ONE TUBE COIN QUANTITY

| COIN     | QUANTITY | DOLLAR AMOUNT |
|----------|----------|---------------|
| Pennies  | 50       | \$ 0.50       |
| Nickels  | 40       | \$ 2.00       |
| Dimes    | 50       | \$ 5.00       |
| Quarters | 40       | \$ 10.00      |

## PRODUCT OPERATION (CONTINUED)

8. When a tube in the front row is full, the machine will stop sorting and the display will indicate which coin tube is full by showing a blinking letter, either Q,N,P,D (quarter, nickel, penny, dime).
9. When a coin tube is full, pull the tube tray, where the full tube is located, forward. The machine will automatically begin sorting again.

**NOTE:** The display will reset the number of coins for that denomination. The total dollar amount will not reset and will continue counting where it left off.

10. While the coins continue sorting, remove the full tube from the tube tray. Pull out the full wrapper and replace with a new coin wrapper.
11. When a coin tube in the back row is full, the machine will stop sorting and the LCD Display will indicate which coin tube is full by a blinking letter. When a tube in the back row is full, remove it and replace with a new wrapper. Push the tube tray all the way back and continue sorting.
12. To reset the display, press the "CLEAR" button. When you are finished sorting, press the "RUN/STOP" button to stop the machine and turn the power switch off.



## QUICK START GUIDE

1. Plug the power cable into the wall power outlet.
2. On the back of the machine, flip the power switch to power on (A).
3. Insert preformed coin wrappers into the corresponding coin tubes (B).
4. Push the rows back into place.
5. Press the "RUN/STOP" button to start coin counting (C).
6. Place the loose change into the hopper to begin sorting.



A



B




C

**For More Detailed Instructions, Go To Page 6**

## FRONT PANEL



**Option A**

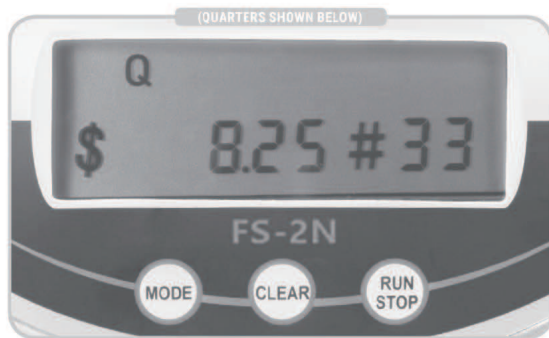

**Option B**

### **RUN / STOP**

Press "RUN / STOP" to start and stop the machine.

### **MODE**

Once the machine is turned on, by default, the display will show the total dollar amount counted (OPTION A). Press the "MODE" button to switch to the count values by denomination (OPTION B). The individual coin count options display the dollar value and total coins counted by denomination. Press the 'MODE' button to flip through denominations. This feature can be changed at any time during the coin counting process. Selecting this button will not interrupt the coin counting process.

### **CLEAR**

Press the "CLEAR" button to reset the display and set the numbers back to zero.

## PRODUCT OPERATION

1. Place the machine on a sturdy and level work surface.
2. Make sure coin rows are pushed back into place.
3. Place coin wrappers into the corresponding tubes. For accurate coin sorting, it is important that the coin wrappers be inserted all the way to the bottom of the tubes and that they do not extend above the top edge of the tube (you may operate the machine without coin wrappers).
4. Turn the power switch on, located on the back side of the machine.
5. When you are ready to start the coin counting process, press the "RUN/STOP" button.

**NOTE:** You will hear a ticking sound. This is the Royal Sovereign Patented Anti-Jam technology working to ensure accurate counts and smooth operation.

6. Insert your loose change into the hopper. Coins will automatically begin sorting into the first row.

**NOTE:** DO NOT insert any foreign objects including: \$1 coins, non-US coins, damaged coins, clips, screws, paper, glass, and pins.

**WARNING:** DO NOT PUT YOUR FINGERS INSIDE THE OPENING.

7. As the machine is operating, you may insert more coins into the hopper.

