


## FT-1 MULTI-FUNCTIONAL CLIP-ON TUNER USER'S MANUAL

Thank you for purchasing the Fender FT-1 multi-function clip-on tuner. This product features an easy-to-read LCD screen with a central needle to indicate tuning accuracy. When a note is in tune, the needle will move to the center of the screen and the backlight will turn green, giving you a quick and easy visual indication that you're in tune. The dual hinge allows the tuner to be properly oriented, whether it's mounted on the front or back of the headstock. The FT-1 is powered by a 3V button battery (CR2032).

### SAFETY NOTICE

- Overall
  - Never use alcohol, gasoline or any other strong cleaning chemicals to clean the exterior of the tuner or the LCD screen.
  - Do not crush or strike the exterior as it may cause the unit to work improperly or malfunction.
- Battery use
  - Confirm that the polarity is correct when inserting a new battery. Proper polarity is indicated by a negative symbol (-) marked on the battery tray.
  - Remove the battery from the unit when not in use for extended periods of time.
  - If the unit is not working properly, remove the battery and re-insert it after 10 seconds.
  - If the LCD screen is hard to read or weakly lit, replace the battery with a new CR2032 battery.
  - Dispose of the old battery properly.

### APPEARANCE AND SKETCH

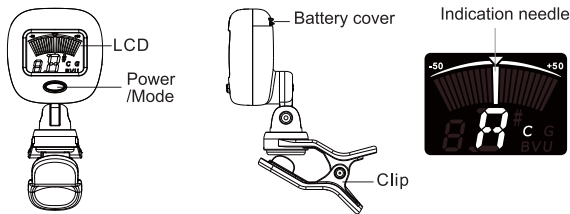

### DETAILED USER INSTRUCTIONS

In order to use the FT-1, remove the battery cover and insert the battery after confirming the correct polarity, as indicated on the battery tray. Replace the battery cover, then press and hold the power button on the front of the unit until the LCD screen is lit. Upon powering up for the first time, the unit will be set to its default Chromatic tuning mode with A4=440 Hz reference pitch.

The single button found on the front of the unit functional as its power on/off button as well as to change between its different tuning modes.

- Turn Power On/Off
  - Power On:
    - Press and hold the Power Button until the LCD screen is lit and it will automatically begin tuning functions. The note accuracy indication needle will remain on the left of the screen until a note is played.
  - Power Off:
    - Press and hold the power button until the backlight of the LCD screen turnoff to enter standby mode. If no operation or signal is detected after three minutes, the unit will completely power off.
- Change Modes:
  - Clicking the power button while the unit is powered on or in standby mode will change between its five different tuning modes:
    - Chromatic
    - Guitar
    - Bass
    - Violin
    - Ukulele
  - After choosing the tuning mode, the unit can be easily adjusted so the screen is visible from different angles.

- When the tuner detects a note, the LCD screen will automatically show the corresponding note name and the needle will indicate how in tune the note is by +/- 50 cents.
- Based on the location of the note accuracy indication needle, adjust the pitch of the note up or down until the needle reaches the center of the display and the backlight changes to green, which indicates the note is in tune.

### SPECIFICATIONS

- Tuning Mode: Chromatic, Guitar, Bass, Violin, Ukulele
- Tuning Range: B0–B7
- A4 Calibration: 440HZ
- Tuning Type: Automatic Clip-on Tuner
- Tolerance: +/-1 cent
- Power: 3V CR2032 battery (one piece)
- Accessories: Manual, CR2032 battery (one piece)

### REPLACING THE BATTERY

When opening the battery cover and inserting a CR2032 battery into this unit, please pay attention to the proper polarity of the battery (indicated by a (-) symbol on the battery tray) to ensure proper functionality. If the unit is unresponsive or will not power on, remove the battery and double-check its polarity, then re-insert the battery and power on as normal.

### Important Safety Instructions

- This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- WARNING:** To prevent damage, fire or shock hazard, do not expose the unit or its AC power adapter to rain or moisture.
- Do not alter the AC plug of the connected power adapter.
- Do not drip or splash liquids or place liquid filled containers on the unit.
- No user serviceable parts inside, refer servicing to qualified personnel only.

### Instrucciones Importantes de Seguridad

- Este producto contiene una pila de tipo botón. En caso de ingestión accidental de la pila, puede producir un proceso de ignición interno en las dos horas siguientes a la ingestión, llegando producir incluso la muerte. Mantenga todas las pilas (tanto nuevas como usadas) lejos del alcance de los niños. Si el compartimento de las pilas no se cierra de forma segura, deje de usar este aparato y evite que quede cerca del alcance de los niños. Si piensa que alguna persona ha podido ingerir la pila accidentalmente o que puede haber sido introducida en alguna parte del cuerpo, vaya inmediatamente a urgencias.
- ADVERTENCIA:** Para evitar daños, incendios y descargas eléctricas, no exponga esta unidad a la lluvia ni a la humedad.
- No anule el propósito de seguridad de este enchufe.
- Evite que goten o salpiquen líquidos y no coloque recipientes con líquidos sobre la unidad.
- Contiene piezas cuyo mantenimiento no lo puede realizar el usuario, sino sólo personal cualificado.

### Consignes de Sécurité Importantes

- Ce produit contient une pile-bouton (pile circulaire plate). Si on avale cette pile-bouton, elle peut, en moins de 2 heures, causer des brûlures internes graves qui peuvent être cause de décès. Conservez les piles neuves et usagées hors de la portée des enfants. Si le compartiment des piles ne ferme pas complètement, cessez d'utiliser ce produit et tenez-le hors de portée des enfants. Si vous pensez qu'une pile a été avalée, ou se trouve à l'intérieur du corps d'un enfant ou d'une personne, consultez immédiatement un docteur ou tout service d'urgence.
- AVERTISSEMENT:** Pour éviter tout dommage, tout risque d'incendie, ou tout risque d'électrocution, n'exposez jamais l'appareil à l'humidité ou à la pluie.
- Ne modifiez pas la prise secteur.
- Ne placez aucun récipient rempli de liquide sur le produit.
- N'effectuez aucune maintenance sur les pièces situées dans l'appareil. Les réparations et la maintenance doivent être exécutées uniquement par un personnel qualifié.

### Istruzioni importanti di Sicurezza

- Questo prodotto contiene una batteria a bottone. Se ingerita, la batteria a bottone può causare gravi ustioni interne in meno di due ore e può portare alla morte. Conservare le batterie nuove e usate fuori dalla portata dei bambini. Se il vano batteria non si chiude saldamente, interrompere l'uso del prodotto e tenerlo fuori dalla portata dei bambini. Se si teme che le batterie possano essere state ingerite o inserite in una qualsiasi cavità corporea, consultare immediatamente un medico.
- AVVERTIMENTO:** Per evitare danni, rischi di incendi o scosse elettriche, non esporre questa unità alla pioggia o all'umidità.
- Non eliminare la spina di sicurezza.
- Non disporre alcun contenitore riempito di liquido sul prodotto.
- Non contiene parti riparabili dall'utente; fare eseguire la manutenzione soltanto da personale qualificato.

### Wichtige Sicherheitsvorkehrungen

- Dieses Produkt enthält eine Knopfzellenbatterie. Wenn die Knopfzellenbatterie verschluckt wird, kann sie in nur 2 Stunden schwere innere Verbrennungen verursachen und zum Tod führen. Halten Sie neue und gebrauchte Batterien von Kindern fern. Wenn sich das Batteriefach nicht sicher verschließen lässt, verwenden Sie das Produkt nicht mehr und halten Sie es von Kindern fern. Wenn Sie vermuten, dass Batterien verschluckt wurden oder in irgendein Körperteil gelangt sind, nehmen Sie sofort medizinische Hilfe in Anspruch.
- WARNUNG:** Setzen Sie dieses Gerät niemals Regen oder Feuchtigkeit aus, um Beschädigung, Brandentstehung und elektrische Schläge zu vermeiden.
- Zerstören Sie nicht die Sicherheitsfunktion des Steckers.
- Setzen Sie das Gerät keiner tropfenden oder spritzenden Flüssigkeit aus; stellen Sie keine mit Flüssigkeit gefüllten Behälter auf dem Gerät ab.
- Im Gerät sind keine zu wartenden Teile. Reparaturarbeiten dürfen nur von qualifizierten Technikern durchgeführt werden.

### Instruções Importantes de Segurança

- Este produto contém uma pilha botão. Se a pilha botão for engolida, a mesma pode causar queimaduras internas sérias em apenas 2 horas e pode levar à morte. Mantenha as pilhas novas e usadas longe do alcance de crianças. Se o compartimento de pilhas não fechar de maneira segura, pare de usar o produto e mantenha-o longe do alcance de crianças. Caso tenha motivos para achar que alguém tenha engolido ou inserido uma pilha em alguma parte de seu corpo, procure atendimento médico imediatamente.
- ADVERTÊNCIA:** Para evitar danos, incêndios y descargas eléctricas, não exponga esta unidade a a lluvia ni a la humedad.
- No anule el propósito de seguridad de este enchufe.
- Evite que goten o salpiquen líquidos y no coloque recipientes con líquidos sobre la unidad.
- Contiene piezas cuyo mantenimiento no lo puede realizar el usuario, sino sólo personal cualificado.

### 安全にお使いいただくために

- 本製品にはコイン/ボタン電池を使用しております。コイン/ボタン電池をおやまて飲み込みますと、2時間て体内に深刻な火傷を生じ、死亡にいたるおそれがあります。未使用または使用済みの電池は、お子様の手の届かない場所に保管してください。製品の電池カバーがきちんと閉まらない場合も使用を中止し、お子様の手の届かないところに置いてください。もし電池を飲み込んだり、電池が体内に留まっていると思われる場合は、ただちに治療を受けてください。
- 警告：破壊や火事、感電を防止するため、本機やACアダプターを雨や湿気にさらさないでください。
- 電源アダプターを接続するACプラグに手を加えないでください。
- 本機に水が垂れたりにはる環境での保管・使用は避け、液体の入った容器を本機の上に置かないでください。
- 内部に使用者が保守可能な部品はありません。保守は有資格の専門家に依頼してください。

### FCC COMPLIANCE NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio communications and there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that of the receiver. Consult the dealer or an experienced radio/TV technician if help is needed with interference.

**NOTE:** FMIC will not be responsible for unauthorized equipment modifications that could violate FCC rules, and/ or void product safety certifications.

部件名称 (Part Name)	有毒有害物质或元素 (Hazardous Substances' Name)					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr <sup>6+</sup> )	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
部分电子元件	X	0	0	0	0	0
部分机加工金属部件	X	0	0	0	0	0
部分其他附属部件	X	0	0	0	0	0

0: 表示该有害物质在规定的含量限制范围内  
X: 表示该有害物质在规定的含量限制范围以外  
注: 表示该有害物质在规定的含量限制范围以外, 且符合RoHS 2002/95/EC 指令的要求

**EQUIPO DE AUDIO**  
IMPORTADO POR: Instrumentos Musicales Fender S.A. de C.V., Calle Huerta # 132  
Col. Carlos Pacheco, C.P. 228890, Ensenada, Baja California, Mexico.  
RFC: IMF870506R5A Hecho en China. Servicio de Cliente: 001-8665045875

A PRODUCT OF:  
FENDER MUSICAL INSTRUMENTS CORPORATION  
CORONA, CALIFORNIA USA