Press briefly to …

Perform OCR scan or exit OCR and prepare to scan another page

Return to previous menu item

Go to previous line

Play, pause, or select item

Go to next line

Press and hold for 5 seconds to …
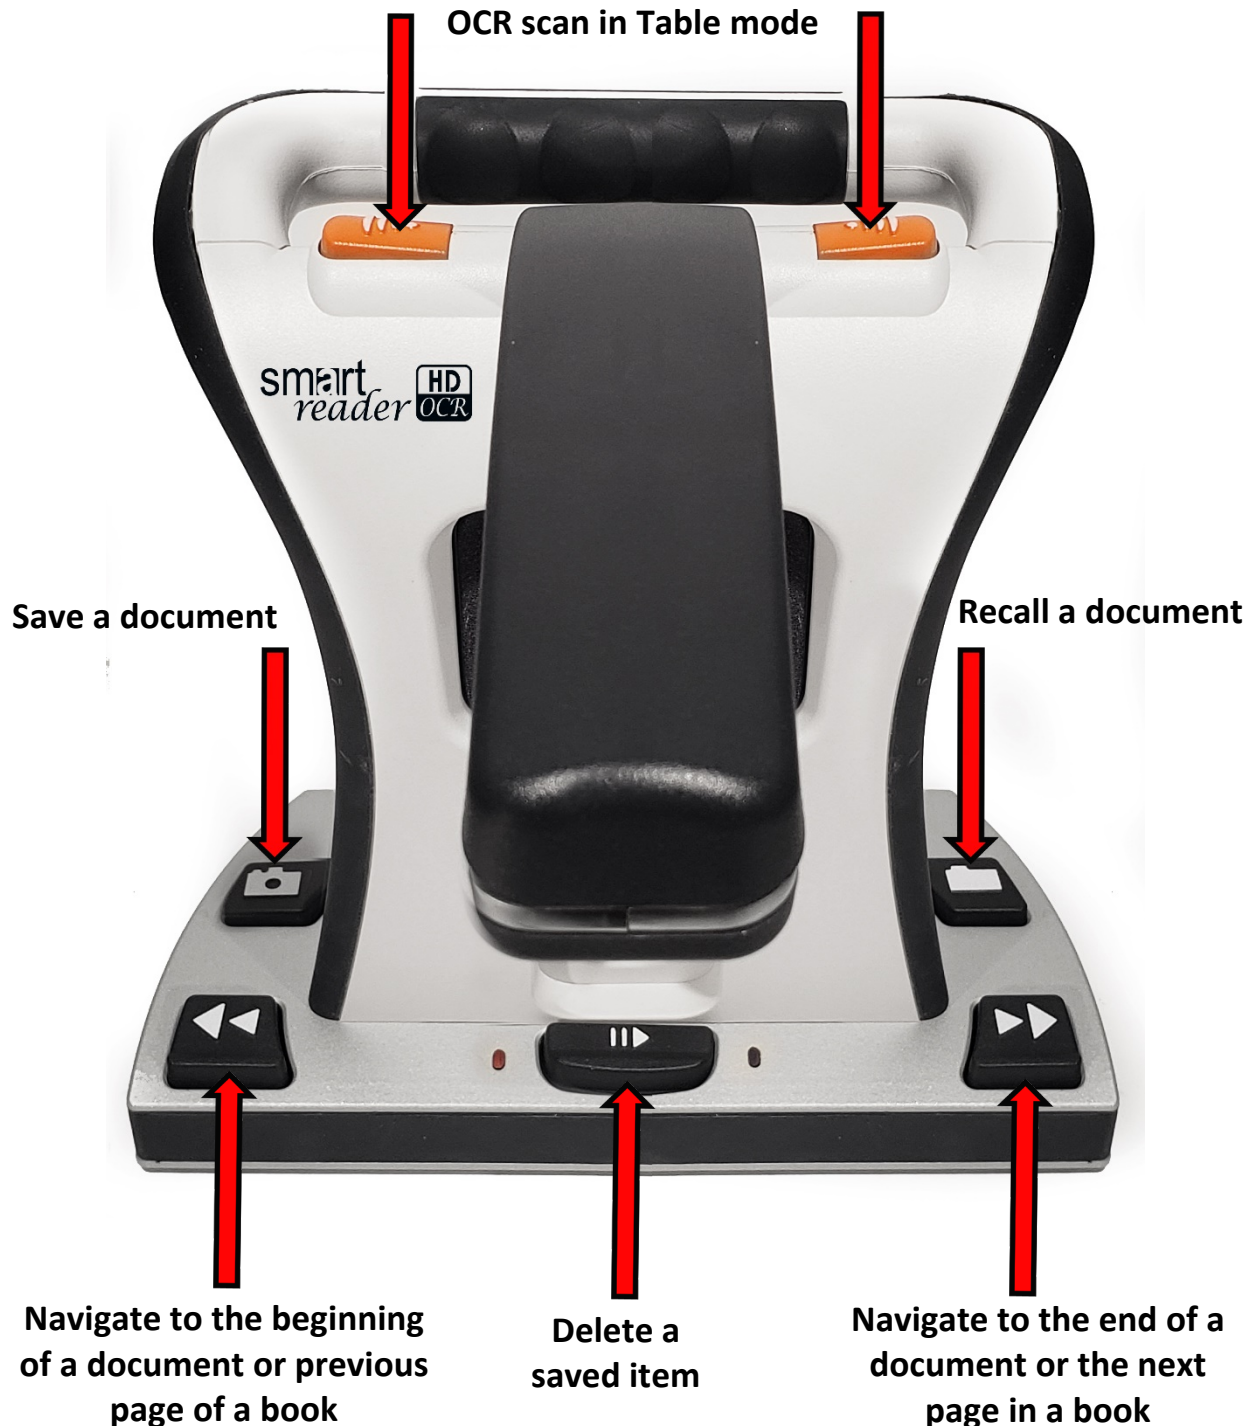
OCR scan in Table mode

Save a document

Recall a document

Navigate to the beginning of a document or previous page of a book

Delete a saved item

Navigate to the end of a document or the next page in a book

enhanced vision
A VISPERO™ BRAND

smart reader HD OCR

Key Combinations

Previous word → Press First + Press Second

Brightness or Zoom → Press First + Then Rotate

Menu or factory reset (long press) → Press First + Press Second

Next word → Press First + Press Second

Color mode → Press First + Then Rotate

Lights on/off → Press First + Press Second

Side Thumbwheels

Right

Left

Rotate to adjust OCR speed or pan image vertically

Rotate to adjust volume or pan image horizontally